

3D Printing Guidelines

Novamid® ID 1030

PA666

GRADE CODING

Novamid® ID 1030 is a strong, ductile and easy to print 3D printing grade based on PA666.

MATERIAL HANDLING

Storage: In order to prevent moisture pick up and contamination, supplied packaging should be kept closed and undamaged. For the same reason, partially used bags should be sealed before re-storage.

Allow the material that has been stored elsewhere to adapt to the temperature in the processing room while keeping the bag closed.

Packaging: Novamid® ID 1030 grades are supplied in airtight, moisture-proof packaging.

Moisture content as delivered: Novamid® ID 1030 grades are packaged at a moisture level <0.05 w%.

Conditioning before printing: To prevent moisture condensing on filaments, bring cold filaments up to ambient temperature in the print shop while keeping the packaging closed.

Drying: In case the filament has become wet, it should be dried. Using a hot air oven at 80°C for at least 4h is recommended. When storing the filament after printing, it is advised to seal the bag and add silica gel to the bag to keep the filament as dry as possible.

MACHINERY SETTINGS

Common fused filament fabrication (FFF) equipment should work with Novamid® filaments, direct drive as well as Bowden type extruders. Typical settings for any slicing software (e.g. Slic3R, Cura, Simplify3D) are listed below. Note that for different nozzle diameters the settings should be changed accordingly.

Nozzle diameter: 0.4 mm

Filament diameter: 2.85 mm, 1.75 mm

Print Speed: 50 -100 mm/s (obeying the maximal throughput of the extruder).

Extrusion width: 0.4 mm (or at least equal to nozzle diameter).

Layer Height: Layers: 0.1 – 0.2 mm / First layer: 100 – 150% of first layer thickness.

Extrusion temperatures: Extruder: 230°C/ 446°F. Novamid® ID 1030 can be used with a range of nozzle temperature (220–245 °C / 428–473°F). Preferred temperature to print your object is 230°C / 446°F. To generate a homogeneous melt, the melt temperature should always be above 225°C / 437°F. Optimal mechanical properties will be achieved at melt temperature between (225–245 °C / 437°F–473°F).

Build plate Temperature:

Build plate temperature setting: 80-120°C / 176-248°F.

Note: prior to removing the printed part from the bed, the bed temperature should be lowered to ambient to avoid severe deformation of the part.

nexeo[®]
solutions

3D PREMIUM
PRINTING
FILAMENT

All statements, information and data presented herein by Nexeo Solutions are believed to be accurate but are not to be taken as a guarantee or other representation for which Nexeo Solutions and its affiliates and subsidiaries assume legal responsibility. NEXEO SOLUTIONS EXPRESSLY DISCLAIMS ANY AND ALL WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARISING OUT OF ANY USE OF THE PRODUCTS OR SERVICES IDENTIFIED HEREIN OR RELIANCE ON ANY INFORMATION PROVIDED HEREIN. All statements, information, recommendations and products must be thoroughly evaluated and verified by the end user to determine their applicability or suitability for each particular use. Typical values are indicative only and are not to be construed as being binding specifications.

© 2016 Nexeo Solutions. All Rights Reserved, Nexeo Solutions, LLC.



3D Printing Guidelines

Novamid® ID 1030

PA666

GENERAL PROCESSING SETTINGS

Build plate adhesion: For the best adhesion with Novamid® ID 1030 it is advised to use an adhesive promotor, e.g. Dimafix®. PEI (polyether imide) build plate has shown to establish good adhesion, but to prevent warpage it should be of sufficient thickness. Adding a (large) brim to the print will help in establishing bed adhesion during the print as well.

Prior to applying an adhesive promotor, any surface must be free from dirt and grease. Therefore cleaning with ethanol or acetone is recommended.

Note: prior to removing the printed part, the build plate temperature should be lowered to ambient temperature to facilitate separation and thus avoiding severe deformation of the printed part.

SAFETY

For the safety properties of the material, please refer to our SDS which can be ordered at our sales offices. During practical operation wear personal safety protections for hand/eye/body.

STARTUP/SHUT DOWN

Production has to be start with a clean machine. Starting the machine, extrude at least 50 mm of new filament through the nozzle. After printing with Novamid® ID 1030, purge the printer with PLA or PETG. Remove the filament from the machine before shutting down the printer.

PRODUCTION BREAKS

At restart after production interruptions exceeding a few minutes, purge the nozzle adequately.

TROUBLESHOOTING

Most common defects:

- **Warping:** Corners of the print lift and detach from the platform. Advice is to increase the build plate temperature. Wait long enough to allow the heat to dissipate to the top of the surface of the substrate.
- **First layer not sticking / parts coming loose:** the first layer of your print does not seem to want to stick or your parts come loose partway through the print. Remedies: check bed levelling and first layer thickness, increase size of brim, raise bed temperature, add appropriate adhesion promotor e.g. Dimafix® the build plate or change to PEI bed substrate.
- **Filament grinding:** The feeder wheels have ground a groove into the filament. Remove the damaged filament and start again, reduce printing speed, reduce retraction speed and length.
- **Stringing:** Unwanted strands of plastic span across the print. Lower nozzle temperature, enable retraction, or increase the retraction length.

For additional info visit our web: www.nexeo3D.com

nexeo[®]
solutions

3D PREMIUM
PRINTING
FILAMENT

All statements, information and data presented herein by Nexeo Solutions are believed to be accurate but are not to be taken as a guarantee or other representation for which Nexeo Solutions and its affiliates and subsidiaries assume legal responsibility. NEXEO SOLUTIONS EXPRESSLY DISCLAIMS ANY AND ALL WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARISING OUT OF ANY USE OF THE PRODUCTS OR SERVICES IDENTIFIED HEREIN OR RELIANCE ON ANY INFORMATION PROVIDED HEREIN. All statements, information, recommendations and products must be thoroughly evaluated and verified by the end user to determine their applicability or suitability for each particular use. Typical values are indicative only and are not to be construed as being binding specifications.

© 2016 Nexeo Solutions. All Rights Reserved, Nexeo Solutions, LLC.